



LUBE-IT[™] 5 Maintenance Release 1 Instructions

IMPORTANT NOTE: This is a two part update. <u>Both the Application Update and the</u> <u>Database Update must be run in conjunction to prevent errors in LUBE-IT.</u>

- The Application Update may be run from any computer with access to the server hosting the LUBE-IT application files. Administrator rights may be required depending on the security settings of the server.
- The Database Update *must* be run on the server hosting the SQL Server LUBE-IT database. Administrative rights to the SQL Server are required.

In addition, the Maintenance Release includes an updated version of LUBE-IT Mobile. In order for those updates to take effect, the LUBE-IT mobile application must be first uninstalled from the mobile device, then reinstalled *after the application update*.

Download the Maintenance Release and extract the following files from LUBEIT5MR1.zip if you have not done so already.

File Name	Purpose
LUBE-IT_5_Maintenance_Release_1_Installation.pdf	Explains how to apply the Maintenance Release
LUBE-IT_5_MR1_Change_Overview.pdf	Describes the changes made by the Maintenance Release
LUBEIT5MR1.exe	Updates the LUBE-IT 5 application files
LUBEIT5MR1dbUpdate.exe	Updates the LUBE-IT 5 database
LUBE-IT_5_Mobile_Setup_Instructions.pdf	Explains how to install LUBE-IT Mobile

GENERATION SYSTEMS



Step 1: Application Update

The Application Update may be run from any computer with access to the server hosting the LUBE-IT application files. Make sure no one is using LUBE-IT during the update. Administrator rights may be required depending on the security settings of the server.

1. Run LUBEIT5MR1.exe



Click the Next button.





Read the License Agreement and then click the I Accept button to accept its terms and continue. Otherwise click the No button.



Please read the instruction on this page carefully.

Click the **Browse** button to change destination folder, if required. Click the **Next** button.

Backup Replaced Files		<u></u>
This installation program can create back the installation. These files will be used wi rollback is requested. If backup copies an uninstall the software and not roll the syste want to create backups of the replaced fil	up copies of all files rep nen the software is unit re not created, you will em back to a previous les?	vlaced during stalled and a only be able to state. Do you
Please select the directory where the repla	aced files will be copie	ed.
⊂ N <u>o</u>		
Backup File Destination Directory		
\\ms-sbs-2011\scratch\lube-it 5_beta	\B	Browse

If you wish to backup changed files select **Yes** radio button and select the directory where the backup will be saved. Click the **Next** button.

吳 LUBE-IT 5 Maintenance Release 1	×
LUBE-IT 5 Maintenance Release 1 Installation	ø
Installation of the LUBE-IT 5 Maintenance Release 1 is now ready begin.	
Click the Next button to begin the installation, click Back to change previous s Cancel to exit.	ettings, or click
< Back Next>	Cancel

Click the Next button.

6.

5.

4.

nstallation Progress	
Copying file: \\ms-sbs-2011\scratch\lube-it 5_beta\ClosePeriod5.dll	
File Progress:	
Overal Progress:	
	Cancel

GENERATION SYSTEMS



_	
~	



The update process has completed. Click the **Finish** button.

Step 2: Database Update

The Database Update *must* be run on the server hosting the SQL Server LUBE-IT database. Make sure no one is using LUBE-IT during the update. Administrator rights to SQL Server are required.

1. Run LUBEIT5MR1dbUpdate.exe





2.



Read the License Agreement and then click the I Accept button to accept its terms and continue. Otherwise click the No button.



Enter the Server Name and Instance Name (leave blank for default instance). Click the **Next** button.

4.

5.

Start Installation	
You are now ready to install L	UBE-IT 5 MR1 DB Update.
Press the Next button to begin information.	the installation or the Back button to reenter the installation
	< <u>B</u> ack Next> Canc

Click then Next button to apply the Update



Click the Finished button to close the program.

GENERATION SYSTEMS



LUBE-IT Mobile Users Only

- 1. If any routes are checked out to the mobile device, sync with the main LUBE-IT system before continuing.
- 2. Uninstall LUBE-IT Mobile using the following steps:
 - a. On the mobile device, open the Start menu and tap Settings.
 - b. Select the System tab, then open Remove Programs.
 - c. Select "Generation Systems, Inc. LUBE-IT Mobile" from the list, then tap the Remove button. Select Yes when prompted.
- 3. Reinstall LUBE-IT Mobile using the accompanying document:

LUBE-IT_5_Mobile_Setup_Instructions.pdf IMPORTANT NOTE: For step 3, do not use the installer located on the LUBE-IT install CD.